Changing the NTP time server

1. Press the Alt-M keys to display the management login prompt.

Password Request Enter management password
Enter management password
OK Cancel

2. Enter *leaves* for the password.

You show then see the main menu.

3. Use the arrow keys to select Time server from the Network menu.

	riostrianie	
Software	Domain	
Browser	Time server	0.0.0
Video	Timezone	
IR	Ethernet link	Auto detect (default)
Network	Packet re-ordering	Disabled
DHCP		
Upgrade		
Restart		

4. Enter the time server such as pool.ntp.org

Hardware	Host name	
Software	Domain	
Browser	Time server	pool.ntp.org
Video	Timezone	
IR	Ethernet link	Auto detect (default)
Network	Packet re-ordering	Disabled
DHCP		
Upgrade		
Restart		

5. Press enter. You should see a password prompt.

Hardware	Host name			
Software	Domain			
Browser	Time server		pool.ntp.org	
Video	Timezone			
IR	Ethernet link		Auto detect (default)	
Network	Packet re-orderi	Password:	abled	
DHCP				
Upgrade				
Restart				

- 6. Enter *snake* as the password.
- 7. Press the arrow keys to select Restart to reboot the Amino.